METRIC HALO



Multiband Expander User's Guide

Multiband Expander Users Guide

Metric Halo

Revision: v1.0.5

Publication date Mon Jun 24 12:11:12 EDT 2013
Copyright © 2013 Metric Halo. MH Production Bundle, ChannelStrip 3, Character, HaloVerb, Multiband Dynamics, Multiband Expander, Precision DeEsser, and TransientControl are our trademarks. All other trademarks are the property of their respective owners.

Table of Contents

I. Installation 6
1. System Requirements 8
2. Installation 9
Macintosh 9
Windows 13
Update Notification 14
II. Multiband Expander 15
3. Introduction 17
4. Operation 18
Control Knob 18
Toggle Button 19
Fader 19
Band Solo Button 19
Tooltip Control 20
Graphs Disclosure Control 20
Gain Reduction Meter 20
Output Meter 21
Dynamic Transfer Function 22
Spectragraph Analyzer 22
Dynamics Knee 24
5. Processing 25
A Detailed Description 25
Input Conditioning 25
Crossover 25
Expander 26
Introduction 26
Expander Enable 27
Band Solo Button 27
Threshold Control 27
Attack Control 27
Release Control 27
III. Working with Hosts 28
6. Pro Tools (Mac/Win) 30
Plug-in Window 30
Key Commands 31
7. AU Hosts (Mac) 32
Logic 32
Plug-in Window 32
IV. Appendices 33
A. Key Commands 35
B. Service and Support 36
C. Changelog 37

List of Figures

2.1. MH MultibandExpander.pkg 9
2.2. Opening Dialog 9
2.3. License Agreement 10
2.4. Accepting the License Agreement 10
2.5. Selecting the Installation Disk 11
2.6. Selecting the Installation Location 11
2.7. Giving the Installer Permission 12
2.8. Installation Complete 12
2.9. MH Character Installer msi 13
2.10. Opening Dialog 13
2.11. Permission to Write Files 14
2.12. Installation Complete 14
3.1. Multiband Expander's User Interface 17
4.1. Swept Knob 18
4.2. Plus/Minus Knob 18
4.3. Toggle Button (Off) 19
4.4. Toggle Button (On) 19
4.5. Output Gain 19
4.6. Band Solo Button (Disabled) 19
4.7. Band Solo Button (Enabled) 19
4.8. Tooltip Control 20
4.9. Graph Disclosure Button 20
4.10. Gain Reduction Meter 20
4.11. Output Meter 21
4.12. Dynamic Transfer Function 22
4.13. Spectragraph Display 23
4.14. Dynamics Knee 24
5.1. Multiband Expander Signal Flow 25
5.2. Crossover Controls 25
5.3. Dynamic Transfer Function 26
5.4. Expander (Low Frequency Shown) 26
6.1. Pro Tools Plug-in Window 30
6.2. Compare Button 30
6.3. Automation Window, Showing Multiband Expander's Parameters 31
7.1. Logic's Plug-in Window 32

List of Tables

6.1. Pro Tools Key Commands 31
A.1. Tooltip Control 35
A.2. Control Knob Modifiers 35
A.3. Numeric Field Modifiers 35
A.4. Meters 35
A.5. EQ Transfer Functions 35
A.6. Pro Tools Key Commands 35

Part I. Installation

Table of Contents

1. System Requirements 8
2. Installation 9
    Macintosh 9
    Windows 13
    Update Notification 14

1. System Requirements

- *Pro Tools™ (Macintosh)*: Pro Tools 10 or higher running on a Macintosh computer. This software supports Native and AAX DSP operation.
- *Pro Tools™ (Windows)*: Pro Tools 10 or higher running on a Windows computer. This software supports Native and AAX DSP operation.
- *Native*: Any Macintosh DAW that supports Audio Unit plug-ins.

- An iLok copy protection key and account. Please note that one Production Bundle license authorizes the software on any platform.

2. Installation

> Screenshots to illustrate the installation process are from the Production Bundle, but the process is the same for individual plug-ins.

Macintosh

Please note – The following graphics show installation on an OS 10.7 system; the process may be slightly different in other versions of the OS, but the basic concepts are the same. Small details such as file sizes shown may vary with subsequent releases.

- Double-click the “MH MultibandExpander.pkg” application



Figure 2.1: MH MultibandExpander.pkg

- The installer dialog will appear:



Figure 2.2: Opening Dialog

Click “Continue”…

- Now you will see the Metric Halo License Agreement:



Figure 2.3: License Agreement

After you have read it, click “Continue”…

- Next click “Agree” to accept the License Agreement:

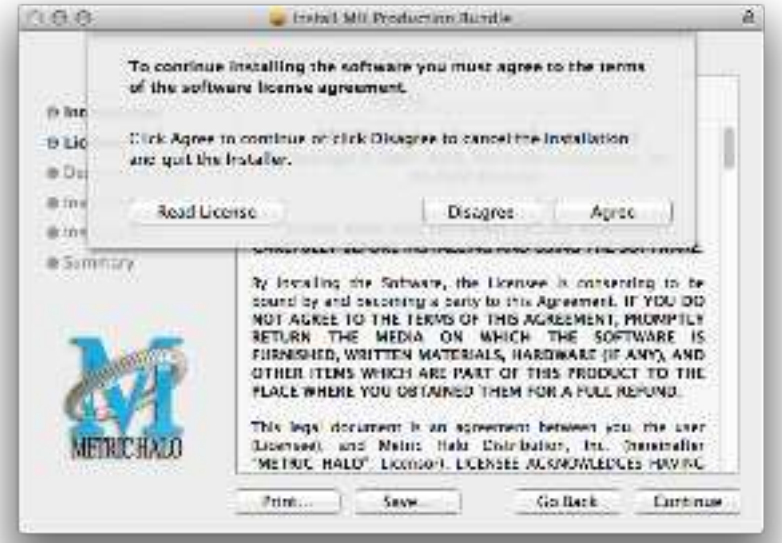


Figure 2.4: Accepting the License Agreement

- Now select the disk you would like the software to be installed to:



Figure 2.5: Selecting the Installation Disk

We recommend installing for all users unless you have a specific reason not to. Select the drive and click “Continue”…

- Next, you have the option to select the location on the disk you would like the software to be installed to:



Figure 2.6: Selecting the Installation Location

We recommend that you use the standard installation location unless you have a specific reason not to. The standard locations are:

- Plug-ins – (drivename)/Library/Application Support/Avid/Audio/Plug-Ins/MH Plug-Ins
- Presets – (drivename)/Library/Application Support/Digidesign/Plug-In Settings

Click “Install”…

- You must now enter the name and password you use to log in to your computer, to give the Installer permission to write the software:



Figure 2.7: Giving the Installer Permission

Enter your credentials and click “Install Software”…

- Once the installer has finished, you'll see this dialog:

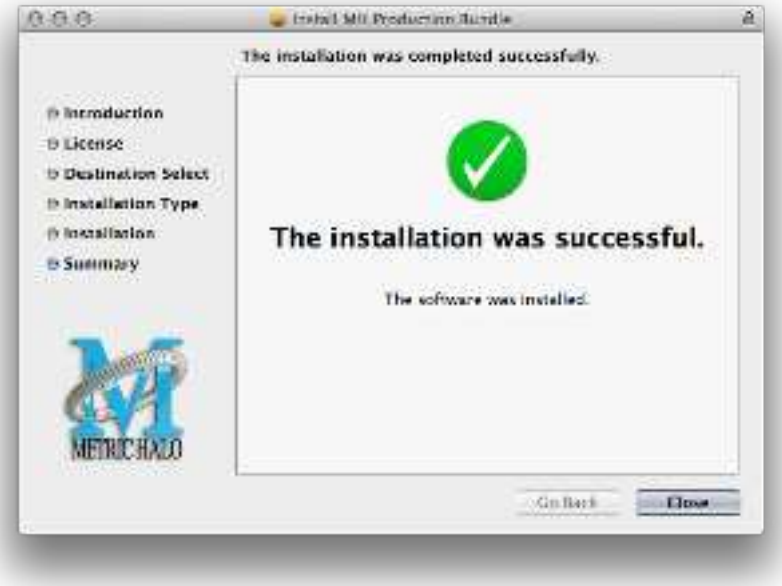


Figure 2.8: Installation Complete

If you do *not* see the “Installation Successful” message, contact MH Support.

- The final step is to go to http://www.ilok.com/ and install the software license to your iLok key.

That’s it! Enjoy using the Multiband Expander!

Windows

There are two versions of each Windows installer:

- Installers that end in *.msi* are intended for 32 bit versions of Windows, and install the 32 bit version of the plug-in(s).
- Installers that end in *_x64.msi* are intended for 64 bit versions of Windows, and install the 32 bit *and* 64 bit versions of the plug-in(s). This allows you to run Pro Tools 10 or 11 on a 64 bit machine.

These installation instructions refer to the 32 bit installer, but the process is the same for 64 bit installations.

Please note – The following graphics show installation on an Windows 7 system; the process may be slightly different in other versions of the OS, but the basic concepts are the same. Small details such as file sizes shown may vary with subsequent releases.

- Double-click the "MHCharacterInstaller.msi" application



Figure 2.9: MH Character Installer msi

- The installer dialog will appear:



Figure 2.10: Opening Dialog

After you have read the Metric Halo License Agreement, click the "I accept the terms of the License Agreement" checkbox and click "Install"

- Windows will ask for permission to write the files:



Figure 2.11: Permission to Write Files

Click “Yes” to begin the installation.

- Once the files have been written you will see the completion dialog:



Figure 2.12: Installation Complete

Click “Finish” to close the installer.

If you do *not* see the “Installation Successful” message, contact MH Support.

- The final step is to go to http://www.ilok.com/ and install the software license to your iLok key.

That’s it! Enjoy using the Metric Halo Production Bundle!

Update Notification

Multiband Expander will automatically check to see if there's a newer version available (if your computer is connected to the internet). If so, the version number in the UI will turn into an update notice. Click on the notice and a browser window will open to our download page, where you may download the newest installer.

Part II. Multiband Expander

Table of Contents

3. Introduction 17
4. Operation 18
    Control Knob 18
    Toggle Button 19
    Fader 19
    Band Solo Button 19
    Tooltip Control 20
    Graphs Disclosure Control 20
    Gain Reduction Meter 20
    Output Meter 21
    Dynamic Transfer Function 22
    Spectragraph Analyzer 22
    Dynamics Knee 24
5. Processing 25
    A Detailed Description 25
    Input Conditioning 25
    Crossover 25
    Expander 26
        Introduction 26
        Expander Enable 27
        Band Solo Button 27
        Threshold Control 27
        Attack Control 27
        Release Control 27

3. Introduction

Multiband Expander's features include:

- Input level control
- Three-way crossover
- Three independent channels of expansion
- Disclosable graphic displays
- Dynamic transfer function display
- SpectraFoo™ spectrum analysis



Figure 3.1: Multiband Expander's User Interface

4. Operation

As with most plug-ins, Multiband Expander provides many copies of controls that are all operated in a similar manner. The Multiband Expander user interface uses a few different control elements to control all of the processing. These elements are:

Control Knob

Control Knobs are used to control the value of various continuous parameters of a process. Examples of these types of parameters include: Attack Time, Release Time, Threshold, etc. There are two styles of encoders:



Figure 4.1: Swept Knob

The rings around these encoders sweep from a minimum to maximum value, normally from left to right. The exceptions are the crossover and threshold controls, which sweep from right to left.



Figure 4.2: Plus/Minus Knob

The rings around these encoders start at 12 o'clock and sweep to either side. These knobs are used for gain control, where straight up is no gain change, turning to the left cuts the signal and turning to the right boosts it.

You can change the value of each knob in a number of different ways. Click and drag the knob to change the value continuously. Dragging up or to the right will increase the value, while dragging down or to the left will decrease the value. If you hold down the Mac ⌘ (Command) key or Windows Control key when you click, you will be able to adjust the value with finer precision. If you hold the Mac ⌥ (Option) key or Windows Alt key when you click, the knob will reset to its default value. You may also double-click a knob to reset it.

Click on the number (readout) of the knob to display a text entry field that allows you to type in a number directly. The pop-up will remain active until you dismiss it by clicking somewhere else or hitting the return, enter, tab, Mac ⌘. (Command + .), Windows Alt key or ESC keys. Hit return or enter to confirm the value and dismiss the pop-up. Hit the tab key to confirm the value and display an entry field for the next control. ⇧–tab (Shift + tab) will display the entry field for the previous control). Hit the Mac ⌘. (Command + .), Windows Control. (Control + .) or ESC (Escape) to dismiss the pop-up and cancel the change.

When you enter a number into the pop-up entry, you can use a couple of abbreviations: “k” multiplies the number by 1000 and “m” divides the number by 1000. So if you want to enter 16,500 Hz you can just type 16.5k.

Toggle Button



Figure 4.3: Toggle Button (Off)



Figure 4.4: Toggle Button (On)

Toggle buttons are simple on/off switches. They light up when they are on and are dark when they are off. You toggle the state of the button by clicking on it. These buttons are used to enable compressor sections and the limiter, and to select auto gain.

Fader

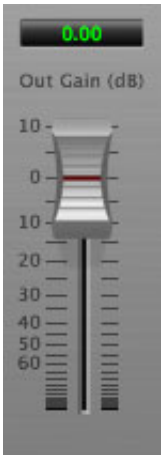


Figure 4.5: Output Gain

The fader is unique in that only one fader is used in the interface for Multiband Expander. It works in much the same fashion as the control knobs. Instead of dragging up/right or down/left to change the value, you directly drag the fader knob. The other “tricks” described for the knobs also work with the fader. The fader is used to control the master output gain of the plug-in.

Band Solo Button



Figure 4.6: Band Solo Button (Disabled)



Figure 4.7: Band Solo Button (Enabled)

The band solo button allows you to listen to an individual crossover band or combination of them. This allows you to hear the effect of each compressor section independantly.

Tooltip Control



Figure 4.8: Tooltip Control

This button toggles the tooltip display. When enabled, tooltips wil be shown when the mouse hovers over a control. When the tooltip display is disabled, you may still see tooltips by holding down the **?** key and hovering over a control.

Graphs Disclosure Control



Figure 4.9: Graph Disclosure Button

The Graphs disclosure control allows you to show and hide Multiband Expander' display graphs. This allows you to maximize screen real-estate while still providing details on the processing when they are needed. Click on this control to toggle the visibility of the graphs. Multiband Expander will automatically make the plug-in window smaller when you hide the graphs.

Multiband Expander also uses a number of standard visual representations to give you feedback about what is happening within the processor. These elements are:

Gain Reduction Meter




Figure 4.10: Gain Reduction Meter

The gain reduction meter, which has an orange bar and grows down from 0 dB, shows the amount of attenuation being applied by its associated dynamics processor at any given time. If you right-click (Mac/Win) or Mac ^ (Control) click on the meter, you may set the scale of the gain reduction meter to any of the following values:

- 54 dB
- 24 db
- 12 db
- 6 db
- 3 db

Output Meter

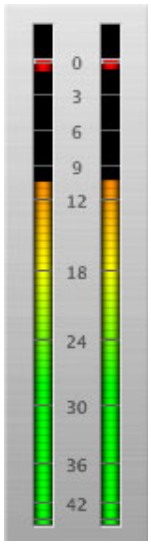


Figure 4.11: Output Meter

For the main output stage of Multiband Expander we have provided meters driven with SpectraFoo™ metering technology. These meters show, in addition to the peak metering provided for the input stages, RMS level and VU level. The peak level is represented by the floating colored bar, the RMS level by the solid colored bar and the VU level by the overlaid gray bar. Both the Peak and RMS level are represented with fast PPM ballistics. The VU meter shows IEEE standard 300 ms RMS average level. When Multiband Expander is on a mono insert there will be a single meter. When Multiband Expander is running in stereo mode the left meter shows the left channel output level and the right meter shows the right channel output level. The output section clip lights activate if there is an over in the output stage or in any of the processing section input stages. It is reset by clicking on the meter; Mac ⌥ (Option)–click or Windows Alt-click to reset the clip lights on all the meters.

A Note About Clipping Indicators:
The clip lights do not mean that the plug-in is clipping; it means that the audio level in the DSP is currently over 0 dBFS. If you do not lower the signal level you run a chance of actually clipping the input of another processor or D/A convertor.

Dynamic Transfer Function

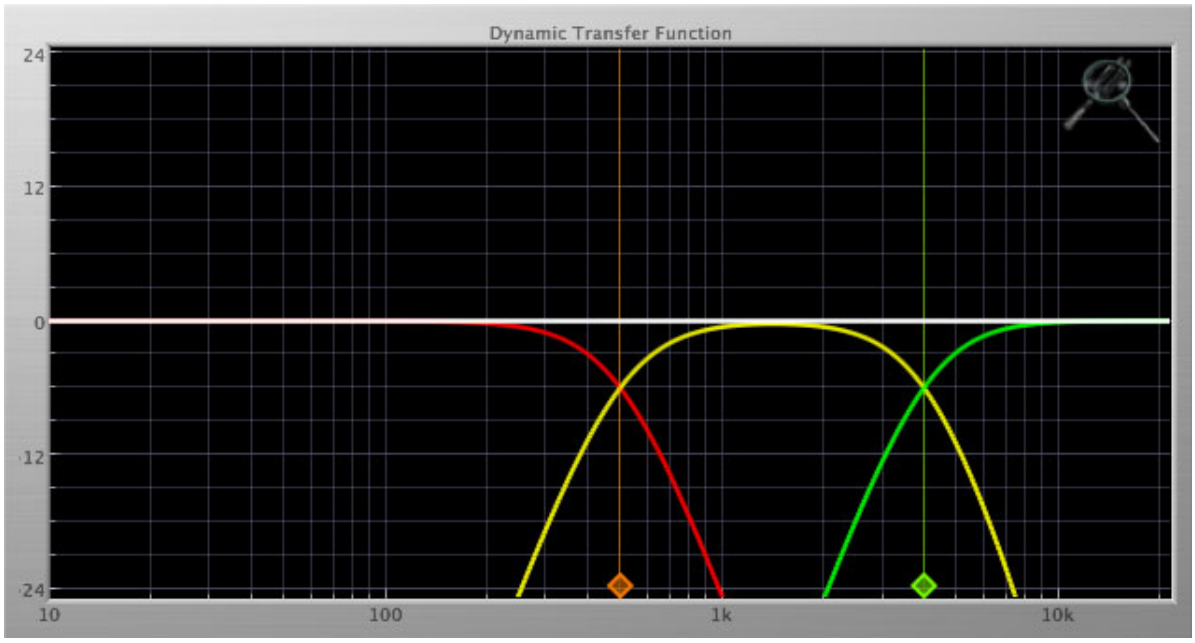


Figure 4.12: Dynamic Transfer Function

The dynamic transfer function is a combination of a visual representation of how the plug-in is processing the signal and an intuitive controller for the crossover filter bands.

The horizontal axis provides frequency calibration in Hertz (Hz), while the vertical axis provides level calibration in decibels (dBr). The heavy white line indicates the relative change in level at each frequency that is created by the combined effects of all of the active bands in the plug-in. Each crossover point (low to mid and mid to high) is represented by a colored dot in the transfer function. You may drag the dots to adjust the crossover points.

If you right-click (Mac/Win) or Mac ^ (Control) click on the transfer function, you will see a menu to set the vertical dB scale for the display. The values are:

- ±3 dB
- ±6 dB
- ±12 dB
- ±24 dB
- ±36 dB

Spectragraph Analyzer

Clicking the SpectraFoo™ logo in the upper right hand corner of the transfer function will activate the spectragraph, showing the realtime frequency analysis of your signal:

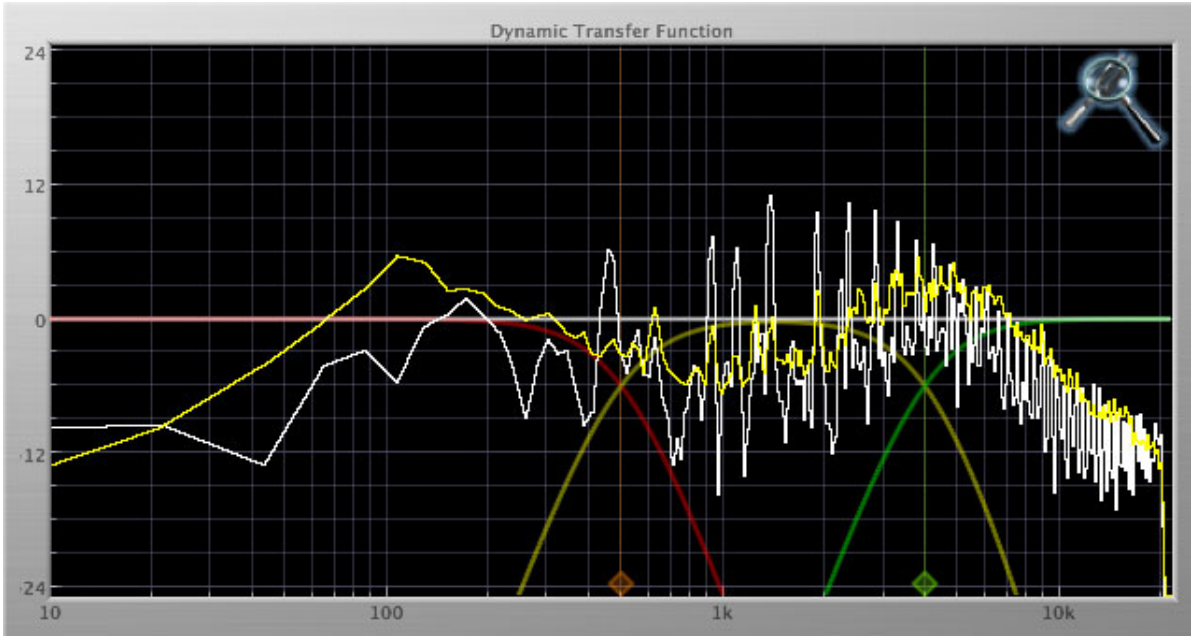


Figure 4.13: Spectragraph Display

The traces are:

- White: Left channel instantaneous display
- Red: Right channel instantaneous display
- Yellow: Left channel average display
- Blue: Right channel average display

The *instantaneous* trace updates in real-time, allowing you to see the immediate peak level of your audio. The *average* trace displays the level as averaged over a short period, giving you a more general view.

The spectragraph analyses the signal post-output gain, allowing you to see the effects of the processors. To disable the spectragraph entirely, click the active 'Foo icon.

If you right-click (Mac/Win) or Mac ^ (Control) click on the transfer function, you will see a menu to set options for the spectragraph:

- Show Instantaneous Trace: Toggles whether the spectragraph shows the instant response of your audio.
- Show Average Trace: Toggles whether the spectragraph shows the averaged response of your audio.
- Show Left Channel: Toggles the left channel spectragraph display.
- Show Right Channel: Toggles the right channel spectragraph display.

These settings are stored for each transfer function window separately, and for each instance of Multiband Expander.

Dynamics Knee

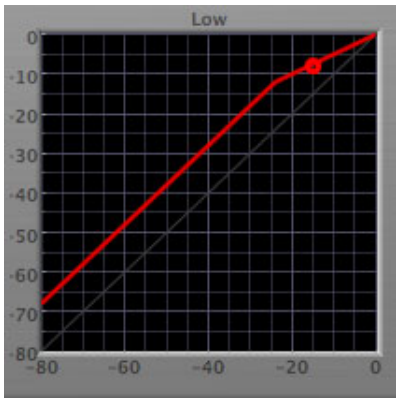


Figure 4.14: Dynamics Knee

Multiband Expander contains a Dynamics Knee diagram for each compressor processing section. The diagram provides feedback on the response of the associated dynamics processor. Both the horizontal and vertical axes are calibrated in dBFS. The horizontal axis corresponds to the input level and the vertical axis represents the output level. The heavy line shows the dynamic of the associated processing block. This means that if you sent in a sine wave at a given input level, the output level would be equal to the level shown on the graph. When the processor is working with real dynamic signals, the graph is a good approximation of the response when the attack is fast and the release is slow.

In most cases, however, the dynamic response of the processor will not match its static response. In order to represent this, we have included a “bouncing ball” meter for both the gate and the compressor. This metering is shown as a red circle that is overlaid on the knee diagram. The red circle is placed so its horizontal position is equal to the instantaneous input level and its vertical level is equal to the instantaneous output level. Examining this meter while you are adjusting the dynamics controls will provide you with a great deal of information about how the processor is operating and how the controls interact.

5. Processing

A Detailed Description

In this chapter we'll discuss what each processing block does and how the controls work.

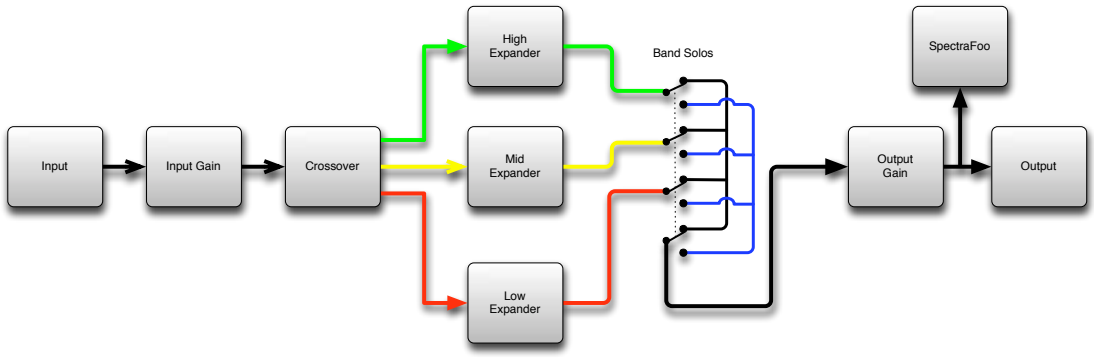


Figure 5.1: Multiband Expander Signal Flow

The block diagram above illustrates the overall structure of the processing system provided by Multiband Expander. The diagram does not indicate the various metering blocks.

Now lets examine the various processing blocks indicated in the diagram.

Input Conditioning

After the signal is routed to Multiband Expander it runs through an input gain block that provides input gain of up to +30 dB. You can use this gain to condition signals that are low in level.

This input gain may also be used to pad out signals by up to –30 dB. While you may find this attenuation useful to just bring down the level through the strip simply and quickly, you must realize that this gain is applied after the signal reaches Multiband Expander and will not pad out any clipping that occurs in the A/D converters or in a plug-in that is inserted before Multiband Expander.

The input gain is controlled by the “In Gain” knob.

Crossover

The crossover seperates the audio input into low, mid and high bands; each of these bands is then fed through a compressor section. There are two controls to set the crossover points:



Figure 5.2: Crossover Controls

The control marked “LXover” sets the frequency of the low to mid crossover, and the control marked “HXover” sets the frequency of the mid to high crossover.

You may also adjust the crossover points in the dynamic transfer function:

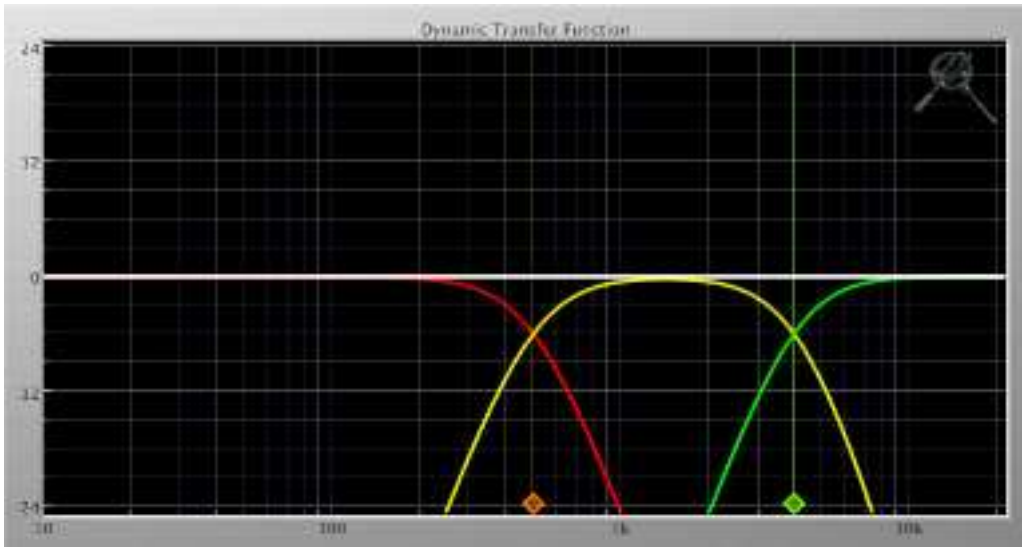


Figure 5.3: Dynamic Transfer Function

Simply grab one of the handles at the bottom of the display and drag to desired frequency. The orange handle adjusts the low/mid crossover point and the green handle adjusts the mid/high crossover point.

Expander



Figure 5.4: Expander (Low Frequency Shown)

Introduction

Multiband Expander contains three separate expanders, one for each crossover band. They are identical, so we will only describe their operation once.

Expander Enable

When this button is off, the expander section will not change the signal.

Band Solo Button

This button (the speaker icon next to the Enable button) allows you to monitor the selected expander's output. This will allow you to listen one or more bands of compression in isolation. When you are done listening to the soloed band(s), click this button again to hear Multiband Expander' normal output.

Threshold Control

The “Thresh” knob controls the level at which the expander begins to reduce the gain applied to the signal. When the detector level is below the threshold level, no gain reduction is applied. As the detector level increases above the threshold level, the gain is reduced as indicated by the knee diagram associated with the expander. The expander knee is soft. The ratio increases as the difference between the detector level and the threshold increases.

The expander threshold level is also indicated by the red bar above the gate input meter. You can adjust the threshold level using this indicator as well as by using the “Thresh” knob.

Attack Control

The “Attack” knob allows you to adjust how quickly the gain reduction is increases when the detector level goes above the threshold level. This control is calibrated in milliseconds and values range from 0 to 500 ms. The expander has an 8 sample look-ahead buffer that allows it to have an “instant attack” when you set the attack time to 0. Fast attack times will control the transients of impulsive sounds. Use longer attack times to let the transients through but control the sustains.

Release Control

The “Release” knob controls the release time of the expander. This knob is calibrated in milliseconds and can range from 5 ms to 5 sec. The release time controls how quickly the gain reduction returns to zero after the detector drops below the threshold value. For settings below 40 ms or so the expander releases pretty abruptly and may introduce unwanted artifacts into your audio, depending on the signal. In addition, be careful making the release time faster than the attack time.

Part III. Working with Hosts

Table of Contents

6. Pro Tools (Mac/Win) 30
Plug-in Window 30
Key Commands 31
7. AU Hosts (Mac) 32
Logic 32
Plug-in Window 32

6. Pro Tools (Mac/Win)

Your Pro Tools software provides a standard interface for controlling various aspects of AAX plug-ins. While you should refer to your Pro Tools documentation for a complete description, we will summarize the most important points here.

If you wish to use a plug-in on multiple channels in your mix, you should Mac ⌥ (Option) or Windows Alt insert the plug-in on the desired channels and ensure that the plug-in is inserted on the same insert point on every channel (e.g. ensure that the plug-in is on insert "a" for every channel). This will allow you to take advantage of a number of time saving features provided by Pro Tools.

Plug-in Window

The illustration below shows the standard Pro Tools plug-in window.

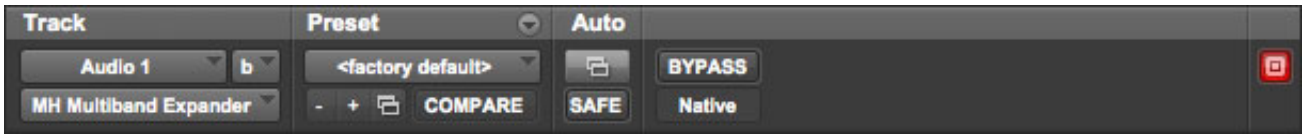


Figure 6.1: Pro Tools Plug-in Window

If you have inserted your plug-in(s) as we suggested above you can click on the channel name pop-up in the upper left hand corner of the window (labeled "Audio 1" above) to switch from channel to channel.

The next pop-up in the window (labeled "b" above) allows you to switch to another insert on the same channel. You would use this to switch to another plug-in on the same channel.

The bypass button allows you to bypass the effects of the plug-in.

The Pro Tools editor/librarian button (the small, downward pointing triangle) provides access to a pop-up menu that allow you to manage presets and libraries of settings for the plug-in. Use this menu to save libraries or open groups of libraries. See your Pro Tools documentation for more information.

The preset library pop-up menu (labeled "factory default" above) shows the active preset name (in italics if the current settings do not match the library). Click this pop-up to select from the available presets.

The "Compare" button indicates when the controls have changed for the current preset settings. Click this button to toggle between your current settings and the preset settings.



Figure 6.2: Compare Button

Clicking the "Automation" button causes Pro Tools to display the plug-in automation configuration dialog box:

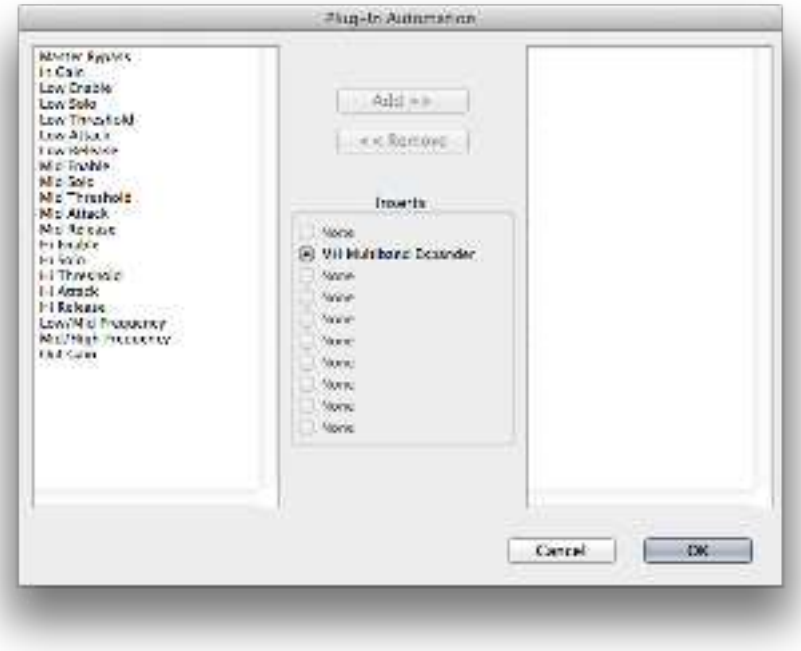


Figure 6.3: Automation Window, Showing Multiband Expander's Parameters

This dialog box allows you to enable any or all of the processing parameters for automation. When a parameter is enabled for automation you will be able to record and play-back automated parameter changes directly from your Pro Tools session. If the channel that the plug-in is inserted on has automation enabled Character will highlight the controls associated with the automated parameters:

- Off: No color
- Read: Green
- Touch, Latch, Write: Red
- Controlled via control surface: Blue

Key Commands

The following key commands are used to when clicking on controls:

Table 6.1. Pro Tools Key Commands

Command	Mac Key Sequence	Windows Key Sequence
Display Automation Dialog	⌥⌘ (Option + Command)–click	Alt + Control–click
Show Automation Breakpoint	^⌘ (Control + Command)–click	Control + Windows–click
Set Parameter to Default Value	⌥ (Option)–click or double–click	Alt-click or double-click

7. AU Hosts (Mac)

The Production Bundle is compatible with any Core Audio compatible host. Support for features like sidechains differ between hosts; please check your host's documentation for more info. As an example, we'll look at using the Production Bundle in Logic.

Logic

Logic provides a standard interface for controlling various aspects of AU plug-ins. While you should refer to your Logic documentation for a complete description, we will summarize the most important points here.

If you wish to use a plug-in on multiple channels in your mix, you should click and drag the selection marquee over the desired channels in the Mixer, and insert the plug-in on any one of them; this will insert the plug-in at the same insert point on every channel.

Plug-in Window

The illustration below shows the standard Logic plug-in window.

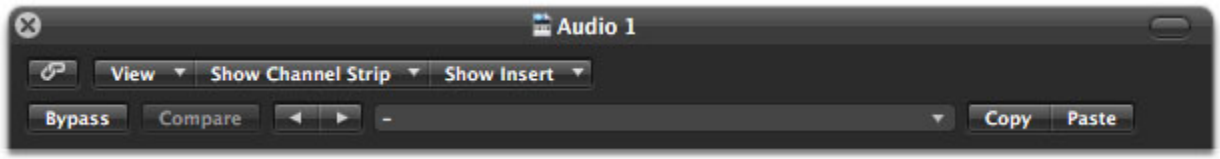


Figure 7.1: Logic's Plug-in Window

If you have inserted the plug-in as we suggested above you can click on the “Show Channel Strip” pop-up to switch between instances of the plug-in on different channels.

The “Show Insert” pop-up allows you to switch to another insert on the same channel. You would use this to switch to another plug-in on the same channel.

When the Link button (the button with the chain icon) is on, a single plug-in window is used to display all plug-ins. Turn this off if you would like to have multiple plug-in windows open at once.

The View button is used to toggle between the generic AU user interface for the plug-in and the standard view provided by Metric Halo.

The Bypass button allows you to bypass the effects of the plug-in. The effects of all the processing sections within the plug-in are removed from the audio chain when the plug-in is bypassed.

The Compare button allows you to toggle between the current settings and the settings as they were before the last paramenter change. By using the Compare button you may “A/B” changes in settings.

The left/right arrows move backward and forward between presets.

The Logic preset menu (the pop-up menu with the small downward pointing triangle next to the left/right arrows) allows you to manage presets and libraries of settings for the plug-ins. Use this menu to save libraries or open groups of libraries. See your Logic documentation for more information.

The Copy and Paste buttons allow you to copy settings from one instance of a plug-in and paste them into the same plug-in on other channels without creating a preset.

The sidechain input pop-up menu allows you to select from any mono input or bus in your system and feed it to the internal sidechain bus within plug-ins that have sidechain support. You then use the sidechain routing buttons within the plug-in UI to assign the sidechain bus to the dynamics detectors. This menu is only present when a sidechain-enabled plug-in is viewed.

Part IV. Appendices

Table of Contents

A. Key Commands 35
B. Service and Support 36
C. Changelog 37

A. Key Commands

There are several key commands used as modifiers combined with mouse actions:

Table A.1. Tooltip Control

Command	Mac Key Sequence	Windows Key Sequence
Show tooltips	Hold ? down	Hold ? down

Table A.2. Control Knob Modifiers

Command	Mac Key Sequence	Windows Key Sequence
Fine control	⌘ (Command)-click and drag	Control-click and drag
Reset to default value	⌥ (Option)-click or double-click	Alt-click or double-click

Table A.3. Numeric Field Modifiers

Command	Mac Key Sequence	Windows Key Sequence
Confirm & dismiss numeric pop-up	return, enter	return, enter
Confirm & move to next entry	tab	tab
Confirm & move to previous entry	⇧–tab (Shift + tab)	⇧–tab (Shift + tab)
Dismiss numeric pop-up & cancel change	⌘. (Command + .), ESC	Control. (Control + .), ESC

Table A.4. Meters

Command	Mac Key Sequence	Windows Key Sequence
Reset Clip	⌥ (Option)–click the meter	Alt-click the meter

Table A.5. EQ Transfer Functions

Command	Mac Key Sequence	Windows Key Sequence
Toggle band enable	⌘ (Command)–click or double-click frequency dot	Control-click or double-click frequency dot
Adjust bandwidth (click then drag)	⌥ (Option)–click frequency dot	Alt-click frequency dot
Change filter type	⌘⌥ (Command + Option)–click frequency dot	Control+Alt-click frequency dot
Access EQ TF settings	^ (Control) or right-click graph	Right-click graph

Table A.6. Pro Tools Key Commands

Command	Mac Key Sequence	Windows Key Sequence
Display Automation Dialog	⌥⌘ (Option + Command)–click	Alt + Control–click
Show Automation Breakpoint	^⌘ (Control + Command)–click	Control + Windows–click
Set Parameter to Default Value	⌥ (Option)–click or double–click	Alt-click or double-click

B. Service and Support

Metric Halo takes great pride in the reputation for customer service and support that we have built. If you have any problems, questions, or suggestions please get in touch with us at:

- http://mhsecure.com/support
- support@mhsecure.com
- (727) 725-9555

Please keep us informed about your successes and projects. We love to hear from you!

C. Changelog

Please note that this changelog incorporates changes for all plug-ins across all supported formats.

1.0.5:

- Fix alignment issue with some UI elements in ChannelStrip
- [AU] Fix issue in some hosts where parameter updates may be lost
- Fix for potential crash on deinstantiation in Multiband Plugins
- [AU] Fix for crash in some hosts (specifically FCPX) due to initialization on a thread
- [AU] Fix meter reset for MultibandCompressor
- [AU] Fix meter reset for MultibandExpander
- [AU] Fix potential crash in HaloVerb
- [AU] Fix meter reset for Character
- Fix meter allocation for MultibandExpander
- Fix analysis buffer allocation for MultibandExpander
- Fix analysis buffer allocation for MultibandCompressor
- Fix analysis buffer allocation for De-Esser
- [AAX] Add support for PT11 and 64-bit build
- [AAX-Win] Implement full optimization for host code (decreases CPU usage)
- [AAX-Win] Implement 64-bit Installers
- Sign Binaries for PT 10.3.x / PT 11
- Fix auto-suffixing of parameter readouts to deal with negative numbers
- [TransientControl] Fix (extend) range of the sustain parameter
- Fix locking for threaded plotter of crossover functions to avoid potential race condition and crash
- [Mac] Fix problem with signing 32-bit binaries (led to corrupted PT 10.3.x plugins)
- Fix Gain Reduction meters for PT reported meters (so that PT11 and control surfaces render them properly)

1.0.4:

- Fixed potential problem with licensing code when plugin scanner opens and closes plugin very quickly
- Moved drawing of HaloVerb impulse response onto background thread for responsiveness
- Moved drawing of Multiband dynamic EQ response onto background thread for responsiveness
- Added caching for background image of plugin window to reduce CPU used for drawing static image
- Fixed incorrect interpretation of wet/dry parameter when computing HaloVerb impulse response display
- Optimized computing HaloVerb impulse response display
- Optimized redraw of EQ response curve
- Fixed problem with incorrectly showing that preset was changed (when it wasn't) via Compare button
- Deferred redraw of UI until host sends parameter changed message -- fixes PT UI pauses when changing certain parameters
- Fixed problem with parameter notification that caused recording of automation for ChannelStrip to not function
- Added work-around to fix problems with multi-parameter touch automation recording in Logic (works-around Logic bug)

1.0.3:

- Soft Interpolation of band Bypass in ChannelStrip EQ
- Fix slight transparency on some controls
- Fixed problem with tool-tip tracking
- Fixed problem with phantom mouse clicks after dragging beyond UI boundary
- Fixed problem with silent output from CS2/CS3 on some hosts with disconnected sidechain input
- Fixed problem with compressor gain state on instantiation
- ChannelStrip: removed recall of Bypass from preset state (to match standard PT behavior)
- Add support for Mac OS 10.5
- Add support to cancel text entry with ⌘. (Command + .) [Control. (Control + .) on Win]
- Fixed interpolation to support bit-clean bypass
- Fixed noise problem with LF high-pass filters
- Fix problem with tooltips appearing even if window is covered by another window or is hidden
- Added a preference to control auto-enable of bands to the Transfer Function popup menu in Channel-Strip 3
- Fixed interpolation in ChannelStrip:
  - Stereo EQ bands
  - Compressor/Limiter threshold
  - Stereo Gate
- Fixed interpolation in Multiband Dynamics:
  - Compressor/Limiter threshold
- Knee control in ChannelStrip 3 is hidden when not in "MIO" character mode
- Added version number reporting and update notification
- Initial release for Windows AAX
- Initial release for Macintosh AU
- Initial release of ChannelStrip 3 for GarageBand

1.0.2:

- Fixed issue with grunge when DSP is filled with MH Precision De-esser
- Further optimized CS3, Precision De-esser, and MH MultibandDynamics, leading to an increase in instance counts
- Fixed bit-cleanliness on bypassed CS3 blocks -- so now CS3 with phase invert nulls with unprocessed audio

1.0.1:

- Substantial optimization of the processing code, especially for HDX
- Accurate Cycle Counts for HDX
- Enhanced control surface page table layouts
- Fix for some corner case bugs that apparently can cause a DSP crash on heavily loaded systems
- Additional interpolation of various parameters in the plugins to provide glitch free parameter changes
- Fixed a conflict between CoreGraphics and DAE that can lead to DAE errors (DSP + Native), CPU Spiking or CPU overloads (Native)
- Fixed a filter stability issue for high session sample rates
- Fixed an issue where the average trace in the analyzer view can get stuck
- Reduce the size on disk and in memory of the plugins
- Fixed some missing control surface metering support and clip detection
- Fixed some small graphic anomalies
- Fix for detector for classic compressor in CS3 when Side-Chain filter is enabled

- Signed installer for Mountain Lion compatibility

1.0: Initial release for Macintosh AAX